

Connecting a Repeater

>> STEP 1

- Turn on the repeater and put into a power outlet
- Click the black button twice (short)
- Activate the sensor you want to connect to the repeater twice PIR (movement sensor), wave your hands A blue light will flash (twice).
- Click the black button twice (short)









- Activate the sensor you want to connect to the repeater twice Door sensor, take the two pieces apart A blue light will flash (twice)
- Click the black button twice (short)
- •Activate the sensor you want to connect to the repeater twice Smoke sensor, press the black button A sound will beep (twice).
- •To control if the accessories are added correctly to the repeater.
- 1. Activate the sensor
- 2. A blue light of the sensor appears (or sounds beep)
- 3. The repeater will show a small red light













