

Quick Installation

Wifi alarm Panel

» STEP 1

Install Software


Download the application

Website:
<http://alarmsecur.com/handleidingen/>
Store: Search for "LiveCloud"


» STEP 2

Registration


Open the LiveCloud application and click register

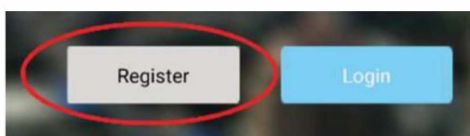

- Enter mobile phone number or emailaddress
- Enter the security code into the white field (6615)
- Click on the green button

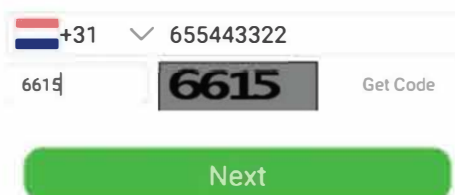

- A. Enter a password (determine yourself, only numbers and letters)
- B. Enter password again
- C. Enter SMS code sent to the mobile phone number or click on the link sent to your emailaddress.

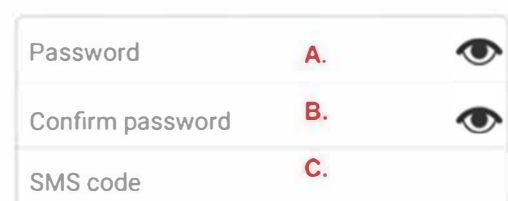

»» STEP 3

Activation

Open the app and fill in the following details:

1. Mobile phone number entered at registration (Step 2).
2. Enter own password
3. Enter security code into the white field (5057)
4. Tick box remember password
5. Enter auto login




- Click on the red button

Click top right on this symbol and click add alarm

NOTIFICATION
Camera and mobile phone should be programmed within 2 meters of the router.

Select Add Wifi device

A. Select WIFI network
B. Enter password WIFI network
- Click on the green button

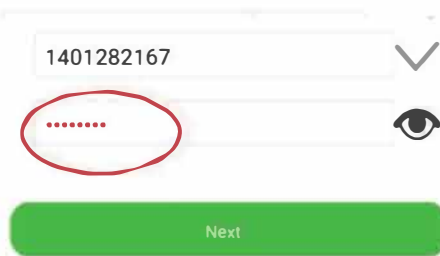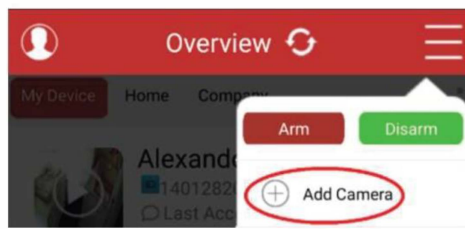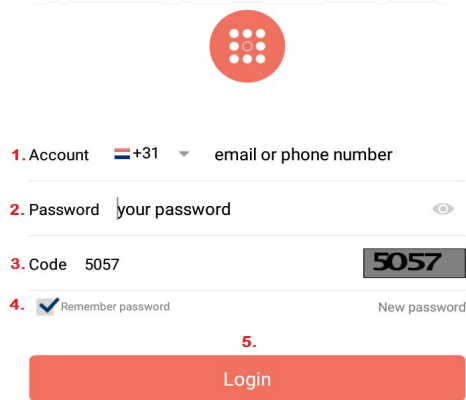

ONLY FOR APPLE IOS


Change WIFI network manually in setting to camera network Password: 12345678, to connect.

Press this button

Go to settings, click WIFI

Select WIFI network : LiveCloud_1401XXXXXX

Press home button and return to the app. Than press green button in the app.

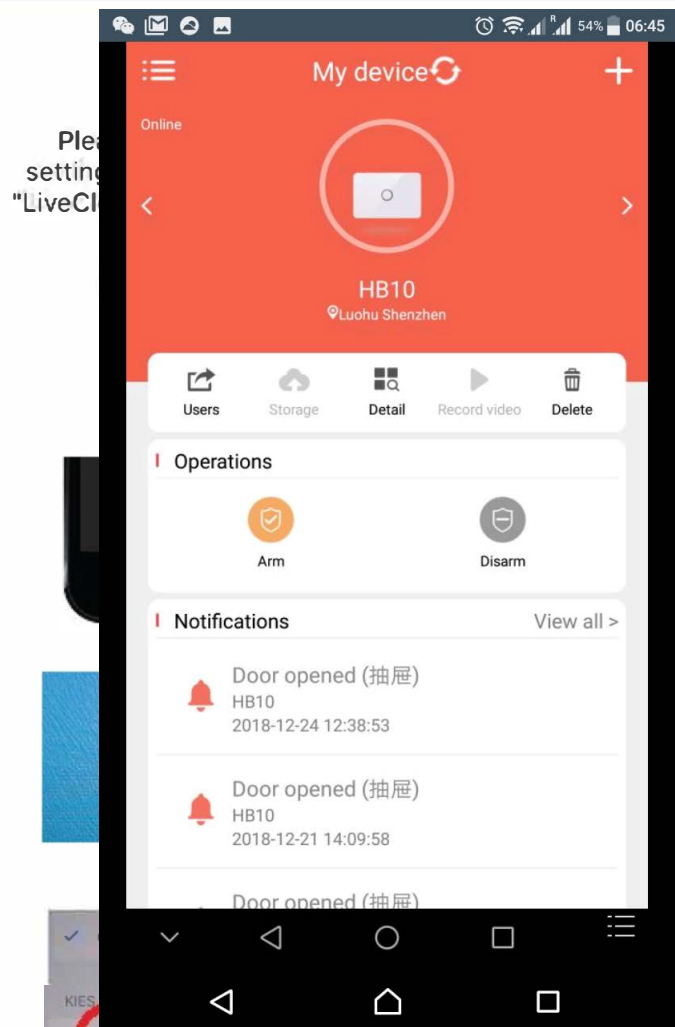

After adding system the following screen is visible.

- Enter system location (determine yourself)
- Click on the green button.
- Following screen appears.

When finished the system is added to the account.



Living room
 1212253324
 Disarm



Model: AlarmSecur

System ID:1212253324

System status:WIFI settings OK


System GPS location

Add to Account

» STEP 4

Settings: Add sensors and set Autofocus




Click the arrow to open Settings. A new screen will open. Click on the + to add sensors

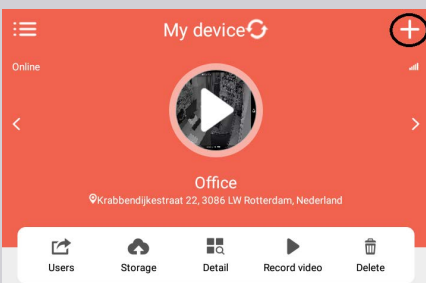

Add 1 sensor by activating them manually:

- Doorsensor
Power on and press on the button (blue light)
- Movement sensor (PIR)
Power on and wave your hand in front of the sensor (blue light)
- Smoke sensor
Press the black button (loud noise)
- Remote control
Press the top button (disarm) or remoter button.

Click the arrow to open Settings. A new screen will open. Click on the + to add sensors

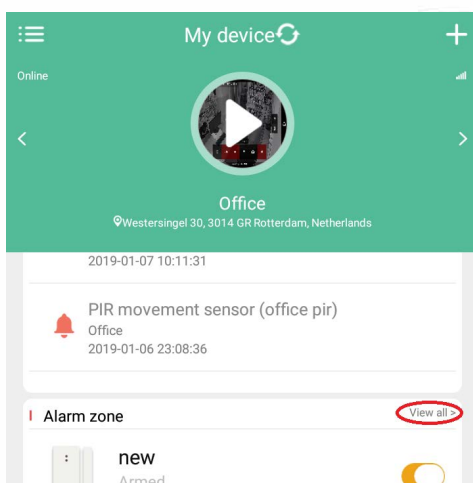

Searching Sensor.....

Activate the Sensor in 119 s

Show how to Add Sensor



Searching Sensor.....

Activate the Sensor in 119 s



Show how to Add Sensor

» STEP 5

Change Wifi and add contact numbers for SMS (simcard is needed)

- Click on Detail. The following screen will open.
- Click on Wifi to change Wifi settings.
- Click on Alarm panel to change contact persons

- Click on Wifi to change network
- Click on Alarm phone and SMS to set contacts and numbers

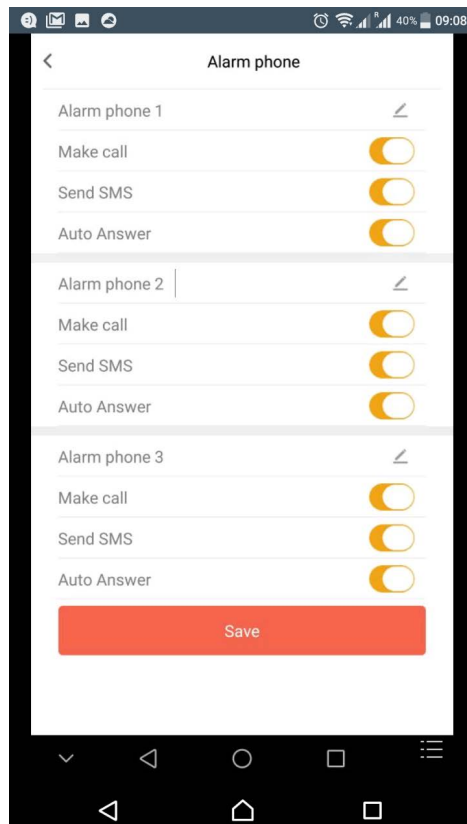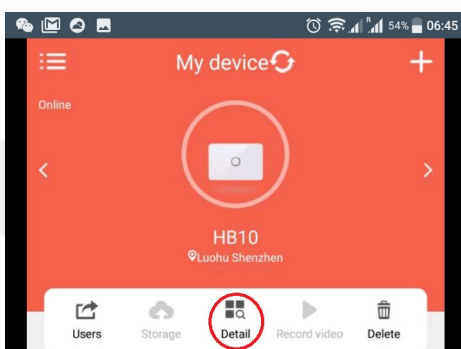

ARM ALARM SYSTEM

- Click arm to activate the alarmsystem
- Click disarm to deactivate the alarmsystem

