

Quick Installation

Wifi alarm Panel

» STEP 1

Install Software


Download the application

Website:
<http://alarmsecur.com/handleidingen/>
Store: Search for "LiveCloud"

» STEP 2

Registration

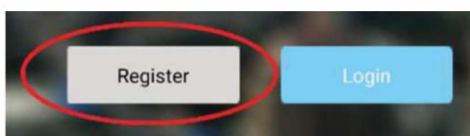

Open the LiveCloud application and click register



- Enter mobile phone number or emailaddress
- Enter the security code into the white field (6615)
- Click on the green button

+31 655443322
6615 6615 Get Code
Next

- A. Enter a password (determine yourself, only numbers and letters)
- B. Enter password again
- C. Enter SMS code sent to the mobile phone number or click on the link sent to your emailaddress.

Password A. 
Confirm password B. 
SMS code C.
Register

Activation

Open the app and fill in the following details:

- 1. Mobile phone number entered at registration (Step 2).
- 2. Enter own password
- 3. Enter security code into the white field (5057)
- 4. Tick box remember password
- 5. Enter auto login





- Click on the red button

Click top right on this symbol and click add alarm

NOTIFICATION
Camera and mobile phone should be programmed within 2 meters of the router.

Select Add Wifi device

A. Select WIFI network
B. Enter password WIFI network
- Click on the green button

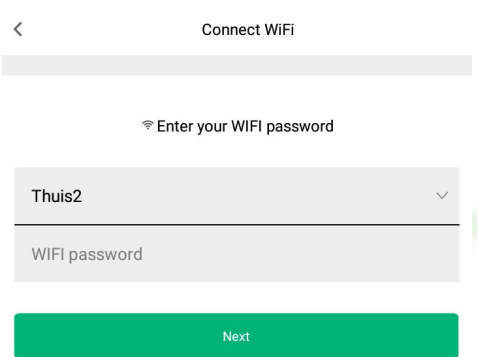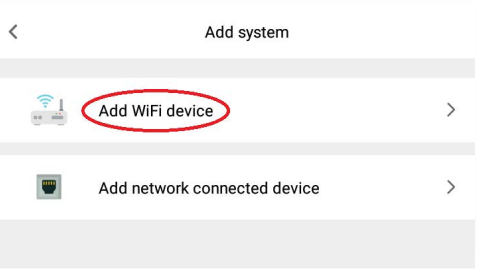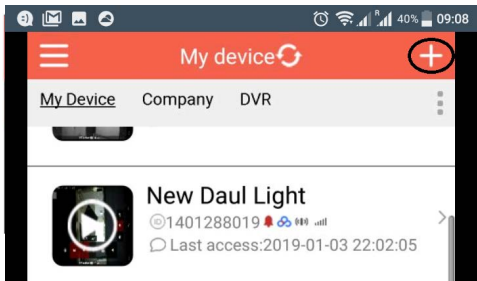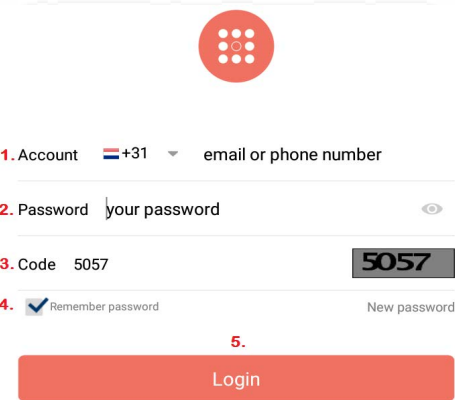

ONLY FOR APPLE IOS

Change WIFI network manually in setting to camera network Password: 12345678, to connect.

Let op!

Please change the iOS Device wifi setting. Connect to Camera WiFi (SSID: "LiveCloud_1401282021") using Password "12345678"

OK


Press this button



Go to settings, click WIFI



Select WIFI network : LiveCloud_1401XXXXXX

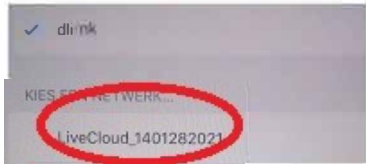


Press home button and return to the app. Than press green button in the app.



After adding system the following screen is visible.

- Enter system location (determine yourself)
- Click on the green button.
- Following screen appears.


When finished the system is added to the account.

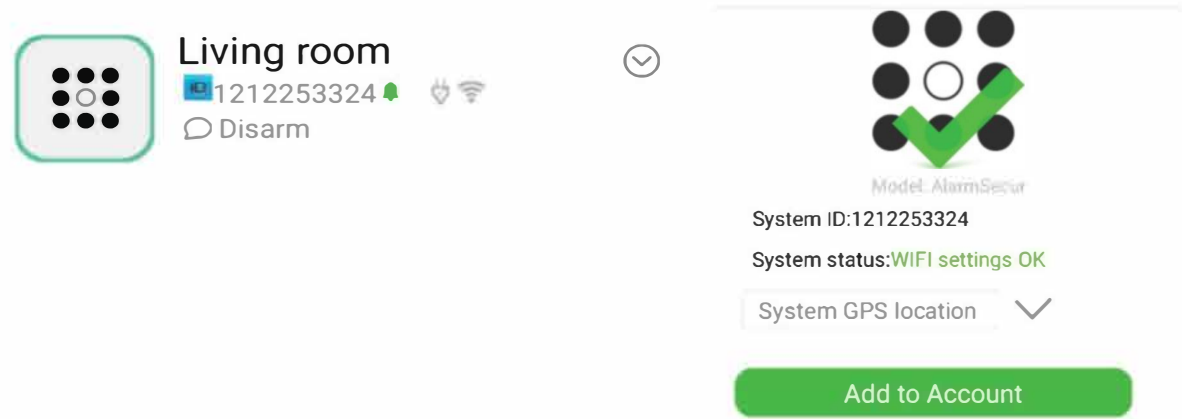

» STEP 4

Settings: Add sensors and set Autofocus


Click the arrow to open Settings. A new screen will open. Click on the + to add sensors

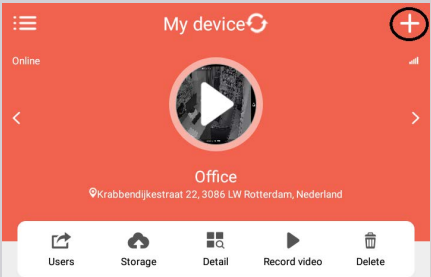

Add 1 sensor by activating them manually:

- Doorsensor
Power on and press on the button (blue light)
- Movement sensor (PIR)
Power on and wave your hand in front of the sensor (blue light)
- Smoke sensor
Press the black button (loud noise)
- Remote control
Press the top button (disarm) or remoter button.

Click the arrow to open Settings. A new screen will open. Click on the + to add sensors

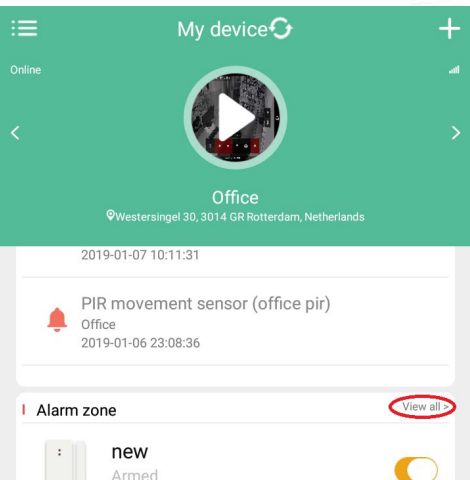

Searching Sensor.....
Activate the Sensor in 119 s

Show how to Add Sensor



Searching Sensor.....
Activate the Sensor in 119 s



Show how to Add Sensor

» STEP 5

Change Wifi and add contact numbers for SMS (simcard is needed)

- Click on Detail. The following screen will open.
- Click on Wifi to change Wifi settings.
- Click on Alarm panel to change contact persons

- Click on Wifi to change network
- Click on Alarm phone and SMS to set contacts and numbers

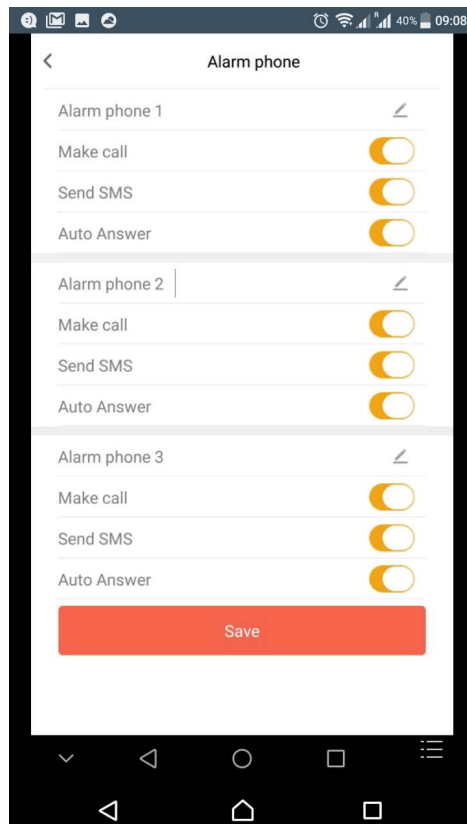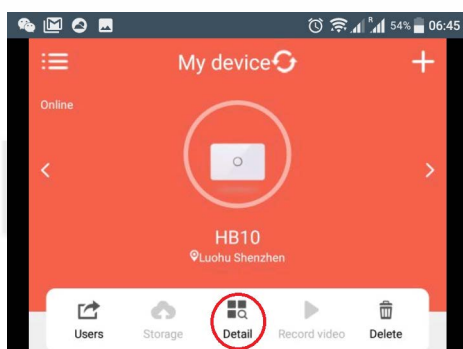

» STEP 6

ARM ALARM SYSTEM

- Click arm to activate the alarmsystem
- Click disarm to deactivate the alarmsystem

